
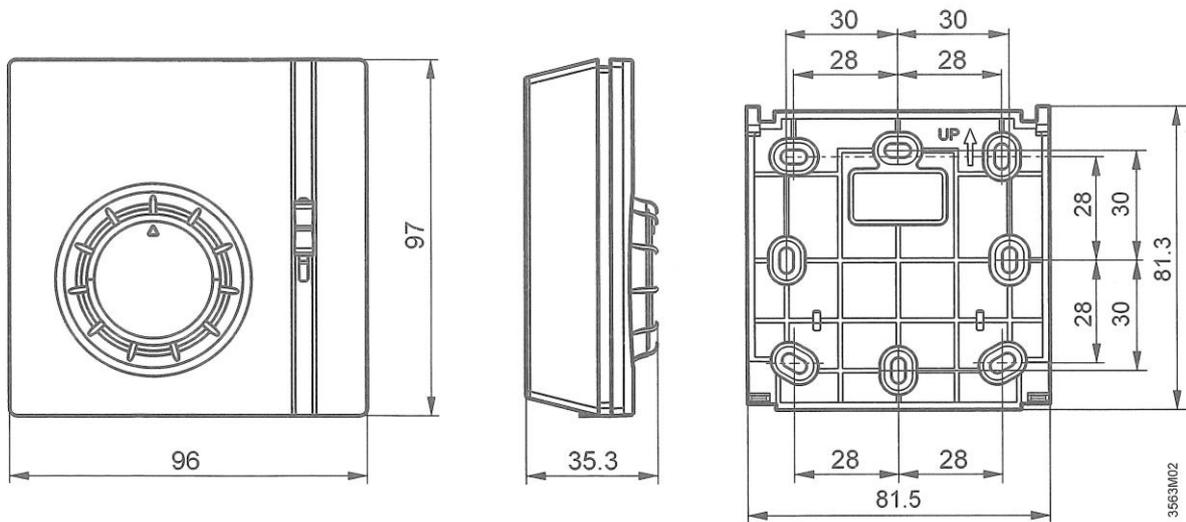


de Installationsanleitung
 en Installation Instructions
 fr Instructions d'installation
 it Istruzioni di montaggio
 nl Installatie-aanwijzing
 zh 安装说明书



es Instrucciones de montaje
 pt Instruções de montagem
 sv Installationsanvisning
 fi Asennusohje
 da Installationsvejledning

el Οδηγίες Εγκατάστασης
 sk Návod na montáž
 cs Montážní list
 pl Instrukcja montażu
 hu Telepítési leírás

BRTMk2

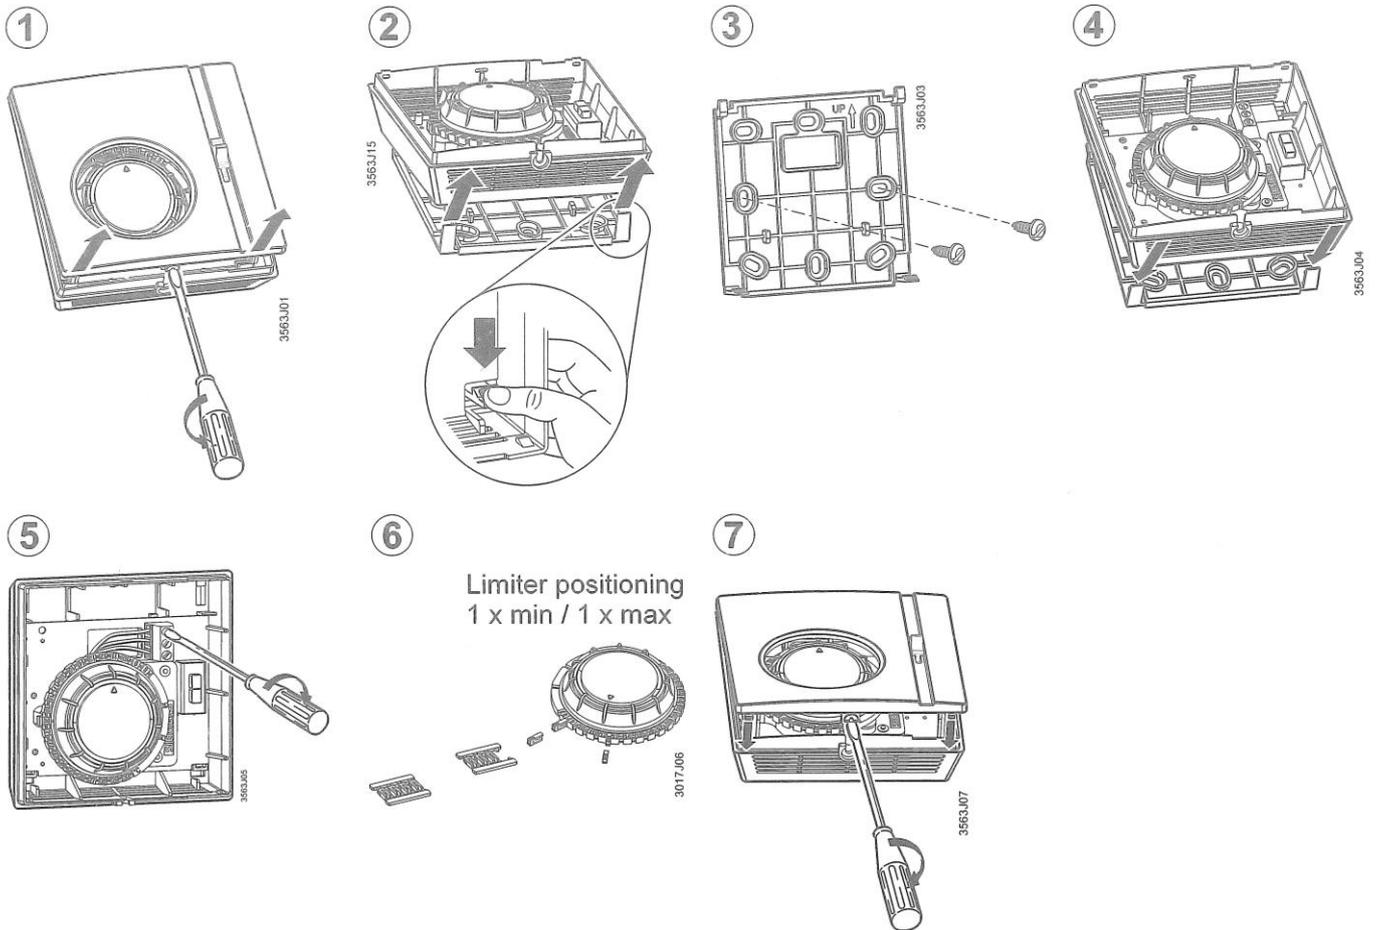

Dimension in mm

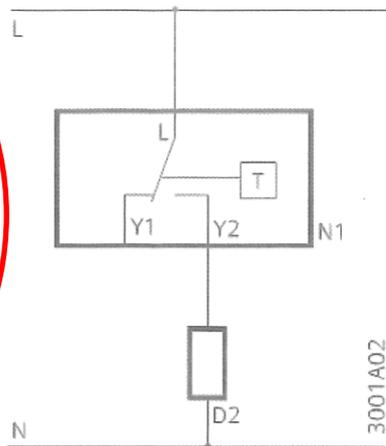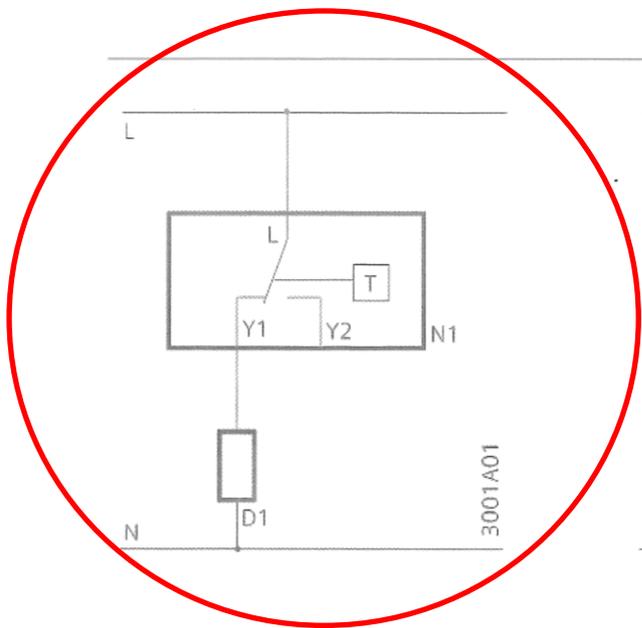

- D1 Zone valve or thermal valve for heating
- D2 Zone valve or thermal valve for cooling
- L Switching voltage
AC 24...250V
- N1 Room thermostat
- Y1 Control output
"Heating", AC 24...250V
- Y2 Control output
"Cooling", AC 24...250V
- N Neutral
- T Thermostat element
(gas-filled diaphragm)

