

AL01 Fault PCB Configuration

- 1) Turn off the electric power to the water heater.
- 2) Turn on electric power supply to the water heater.
- 3) The display will show 04,05,06 or 07 - this is the PCB version, PR - Gas Type, LE - Low Emissions and 11 - Liters per min.
- 4) Wait until temperature is shown in the display.
- 5) Press in the control knob until 00 is shown in the display, then release, - - will be shown before 00.
- 6) Turn the control knob clockwise until 06 is shown in the display.
- 7) Press the control knob once and tS will be shown in the display.
- 8) Press the control knob once, 02, 1 & tS will flash alternately in the display.
- 9) With either 02 or tS in the display turn the control knob clockwise until 10 is displayed.
- 10) Press the control knob once and 1 will be flashing in the display.
- 11) Turn the control knob clockwise until 2 is shown in the display, this is for PCB versions 04 and 05.
- 12) For PCB version 06 or 07 turn the control knob clockwise until 3 is shown in the display.
- 13) Press the control knob once to confirm the selected parameter, tS-10-3 will be displayed alternately.
- 14) Wait until 10 is displayed and turn the control knob clockwise until 27 is displayed.
- 15) Press the control knob once and 1 will be flashing in the display.
- 16) Turn the control knob clockwise until 0 is shown in the display.
- 17) Press the control knob once to confirm the selected parameter, tS-27-0 will be displayed alternately.
- 18) Press the control knob in until the MENU sign starts flashing, then release the control knob.
- 19) tS should be shown in the display.
- 20) Press the control knob until the MENU sign starts flashing, then release the control knob.
- 21) The selected temperature should now be shown in the display.
- 22) Finished.

Please note: If the control knob is pressed in for more than 30 seconds, AL42 will be displayed, release the control knob and after a few seconds AL42 will disappear, then start again.